

Work Order ID 71201

Thursday, June 23, 2011 12:36:52 PM



Page 1

Item ID: D3507-1-BENT

Accept



Setup Start



Revision ID:

Item Name: Skidtube Assembly EC135

Stop



Start Date: 6/23/2011 Start Qty: 2.00

Cust Item ID:

Required Date: 6/29/2011 Req'd Qty: 2.00

Customer:

Reference:

Approvals: Process Plan: C2 Date: 11/06/23 Tooling: _____ Date: _____
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start



Stop



Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr
D3507	Rev C

120

0.00



BENDING MACHINE - SKIDTUBES

CNC Bend I

Memo

0.00

CNC Delta 100 Bender

1- Bend tube as per program on CNC Bender and Dwg D3507, use DT9632 bending aide
2- Cut FWD END of tube as per dwg D3507

4 @ Bend 7/12

PTO

140

QC5- Inspect part completeness to step on W/O

0.00



QC

Memo

0.00

Quality Control

8 ulozho

(+4) 2

300

Identify as per dwg & Stock Location: LG

0.00



Packaging

Packaging

Memo

0.00

Packaging

4 @ Bend 7/12

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: D337-1 Bent PAR #: _____ Fault Category: Landing Gear NCR: Yes No DQA: OK Date: 11/07/27
 Resolution: SCAD Disposition: SCAD QA: N/C Closed: OK Date: 11-07-27

NCR: <u>71201</u>		WORK ORDER NON-CONFORMANCE (NCR) <u>89.33 x2 178.66</u>						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			
<u>11-7-12</u>	<u>120</u>	<u>Material Kinked while Bending. QTY: 2 RC/Process</u>	<u>[Signature]</u> <u>07/12</u>	<u>Scrap + Replace</u> <u>QTY: 2</u> <u>B# 59934</u>	<u>BE</u> <u>11/07/12</u>	<u>[Signature]</u> <u>u67118</u>	<u>[Signature]</u> <u>07/12</u>	<u>[Signature]</u> <u>u67118</u>

NOTE: Date & initial all entries

Work Order ID 71201

Thursday, June 23, 2011 12:36:52 PM



Page 2

Item ID: D3507-1-BENT

Accept



Setup Start



Revision ID:

Stop



Item Name: Skidtube Assembly EC135

Start Date: 6/23/2011 Start Qty: 2.00



Cust Item ID:

Required Date: 6/29/2011 Req'd Qty: 2.00



Customer:

Reference:

Run Start



Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop

Sequence ID/
Work Center IDOperation
DescriptionSet Up/
Run Hours

Tool ID

Tool #

Plan
CodeAccept
QtyReject
QtyReject
NumberInsp.
Stamp

310

QC21- Final Inspection - Work Order Release

0.00



QC

Memo

0.00

Quality Control

11/17/27

11-07-24

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Picklist Print

Thursday, June 23, 2011 12:36:50 PM

Page 1

Work Order ID: 71201

Parent Item: D3507-1-BENT

Parent Item Name: Skidtube Assembly EC135



Start Date: 6/23/2011

Required Date: 6/29/2011

Start Qty: 2.00

Required Qty: 2.00

Comments: IPP rev A 10.09.17 new issue EC verified by:DD

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D2962-150		Manufactured	No			100	Each	81.0000	1	2			
-----------	--	--------------	----	--	--	-----	------	---------	---	---	--	--	--



3.540 Outer Tube, Extrut



BB/C7/12

Location

Loc Qty

Loc Code

HALL

81

28672

8

59934

73

246

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Qty	Part Number	Description
X	D3507-041	SKIDTUBE ASSEMBLY
1	D2962-150	EXTRUSION
1	D2965	CAP
1	D2965-3	CAP
4	D3492-041	PLUG ASSEMBLY
4	D3492-043	PLUG ASSEMBLY
2	D3492-047	PLUG ASSEMBLY
2	D3504-1	CROSS BOLT SPACER
1	D3504-3	CROSS BOLT SPACER
2	D3504-5	CROSS BOLT SPACER
1	D3505-1	WEB
4	D3506-1	DOUBLER
2	D3506-3	DOUBLER
1	D3508-1	WEARPLATE
1	D3508-3	WEARPLATE
1	D3508-5	WEARPLATE
1	D3508-7	WEARPLATE
1	D3558-1	GASKET
1	D3558-3	GASKET
1	D3558-5	GASKET
1	D3558-7	GASKET
38	AELS-1032-130	INSERT
1	AELS-1032-225	INSERT
31	AN3C4A	BOLT
2	AN3C5A	BOLT
2	AN526C1032-10	SCREW
33	AN960C10L	WASHER
12	MS20601AD4W3	RIVET



SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 71201

CL1106123

GENERAL NOTES:

- 1) FINISH:
CHEMICAL CONVERSION COAT PER DART QSI 005 4.1 PRIOR TO INSERTING D3505-1 WEB. POWDER COAT ASSEMBLY GLOSS WHITE (REF 4.3.5.1) PER DART QSI 005 4.3. ANTI-SKID PAINT AS INDICATED TO 1.00 ABOVE CENTER LINE PER DART QSI 005 4.4
- 2) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
- 3) DIMENSIONS: INCHES UNLESS OTHERWISE NOTED
- 4) WELDING TO BE DONE PER DART QSI 004
- 5) INSERT D3505-1 WEB TO LOCATION SHOWN OFF AFT END OF SKIDTUBE AND BOND WEB INTO OUTER TUBE WITH NON-STRUCTURAL SIKAFLEX-241/-291 ADHESIVE PER DART QSI 015 AFTER BENDING
- 6) USE DART DRILL TEMPLATE DT8888 TO LOCATE AND DRILL Ø0.297 HOLES (38 PLACES) FOR WEARSHOE INSERTS. INSTALL AELS-1032-130 PER SECTION C-C (38 PLACES) AFTER FINISH. SEAL WEARPLATE BOLTS WITH SIKAFLEX-241/-291.
- 7) DO NOT INSTALL AN3C4A BOLTS AND AN960C10L WASHERS IN INDICATED LOCATIONS

C	ADD D3504-5, FOR SKID GEAR DEFLECTOR; CHANGE FWD CAP BOLT TO AN526C1032-10 SCREW	DC	07.09.19
B	ADD GASKET, CHANGE HARDWARE MATL	PH	06.11.01
A	NEW ISSUE	PH	06.04.21
REV.	DESCRIPTION	BY	DATE
DESIGN	PH	DART AEROSPACE USA, INC PORT HADLOCK, WA	
DRAWN	JC		
CHECKED	BA		
MFG. APPR.	BA		
APPROVED	BA		
DE APPR.	BA	DRAWING NO.	REV. C
		D3507	SHEET 1 OF 2
		TITLE	SCALE
		EC 135 SKIDTUBE	NTS
DATE	07.09.19	COPYRIGHT © 2006 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

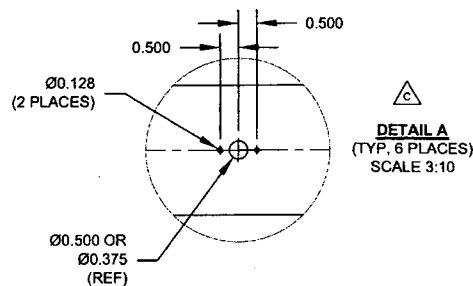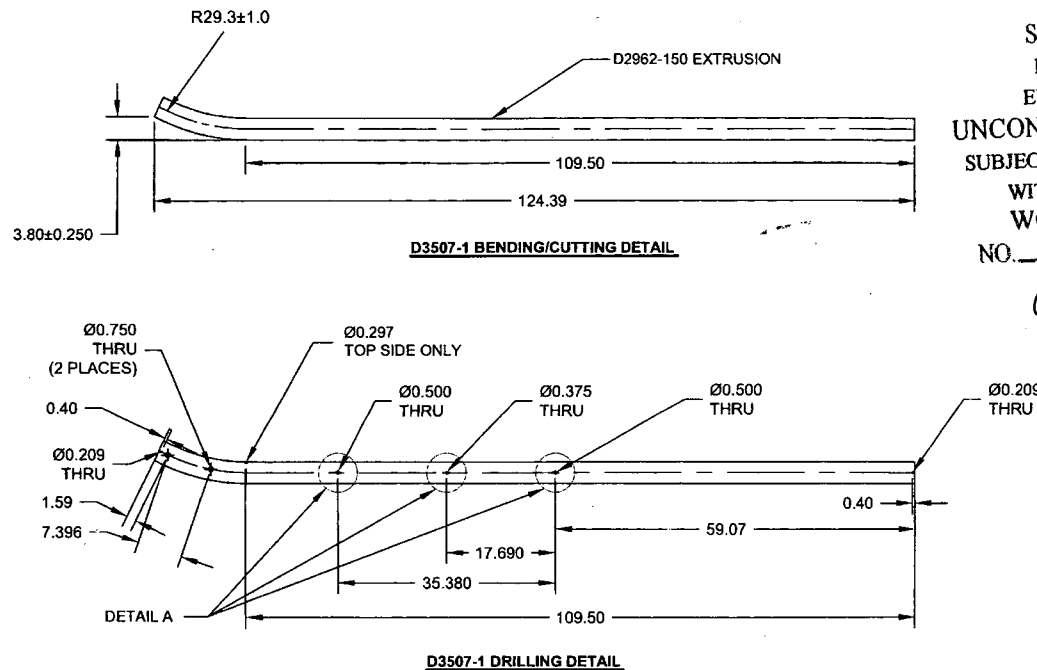

RELEASED
07-11-16

